


1.5 Ton Badland - Drop In Mount Instructions

Please read entirely before installing.

Step 1: Left pic. below - Place mounts in desired location with tabs to outside. Drop jack on for test fit and mark the mount locations. Remove jack and drill bolt holes. Install cable lock now if desired, as shown with numbers next to and laying under mount. Loosely install mounts with screws or bolts, place jack on for final alignment then remove and tighten bolts.

Step 2: Right pic. below – Bend tabs using adjustable wrench as pictured. Start bend about 1/8" - 1/4" away from relief cuts in mount. Tabs should be same width as mount peak on other side, but this is not critical.

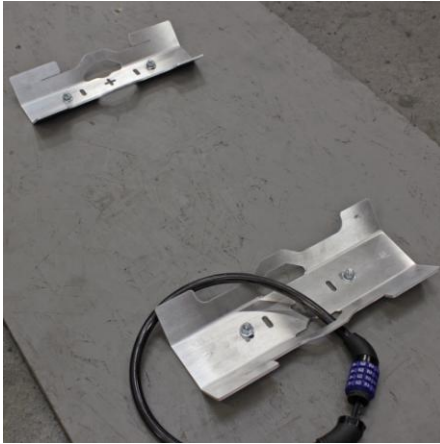

Step 4: Left pic below – Attach strap to mounts and lay off to the side. You can double up the strap as shown, or lace hook through each mount and use single strap to secure.

Step 5: Right pic. below – Drop the jack on, secure with strap as shown. Lace cable lock around side handle as shown.

